



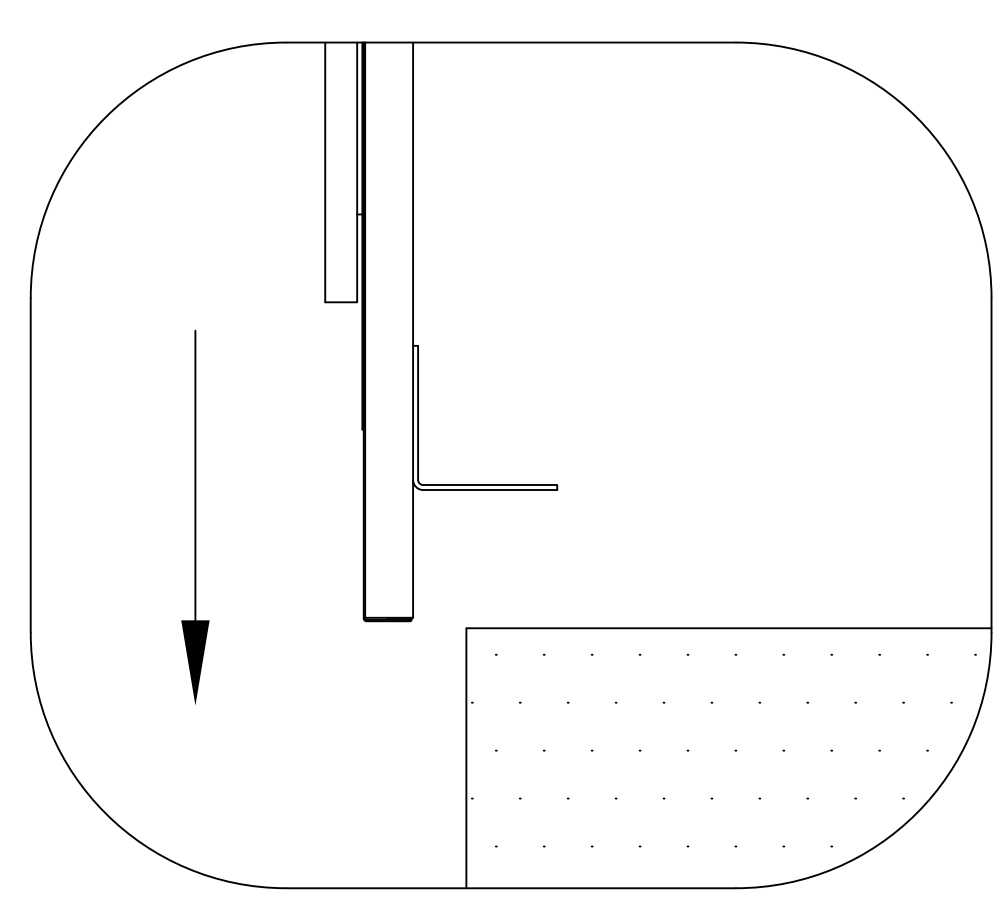


## 66" CUPOLA WINDOW/LOUVER INSTALLATION INSTRUCTIONS


- ① LIFT CUPOLA, USING HOIST RING ON TOP OF ROOF CAP, HIGH ENOUGH TO GAIN ACCESS TO SCREWS HOLDING CUPOLA TO SKID.
- ② REMOVE SKID FROM BOTTOM OF CUPOLA.
- ③ LIFT CUPOLA TO ROOF TOP USING HOIST RING. LOWER ONTO CURB OR BASE.
- ④ IF CURB IS OPEN TO AREA BELOW, ATTACH CUPOLA ON INSIDE USING SCREWS PROVIDED IN HOLES OF ANGLES.

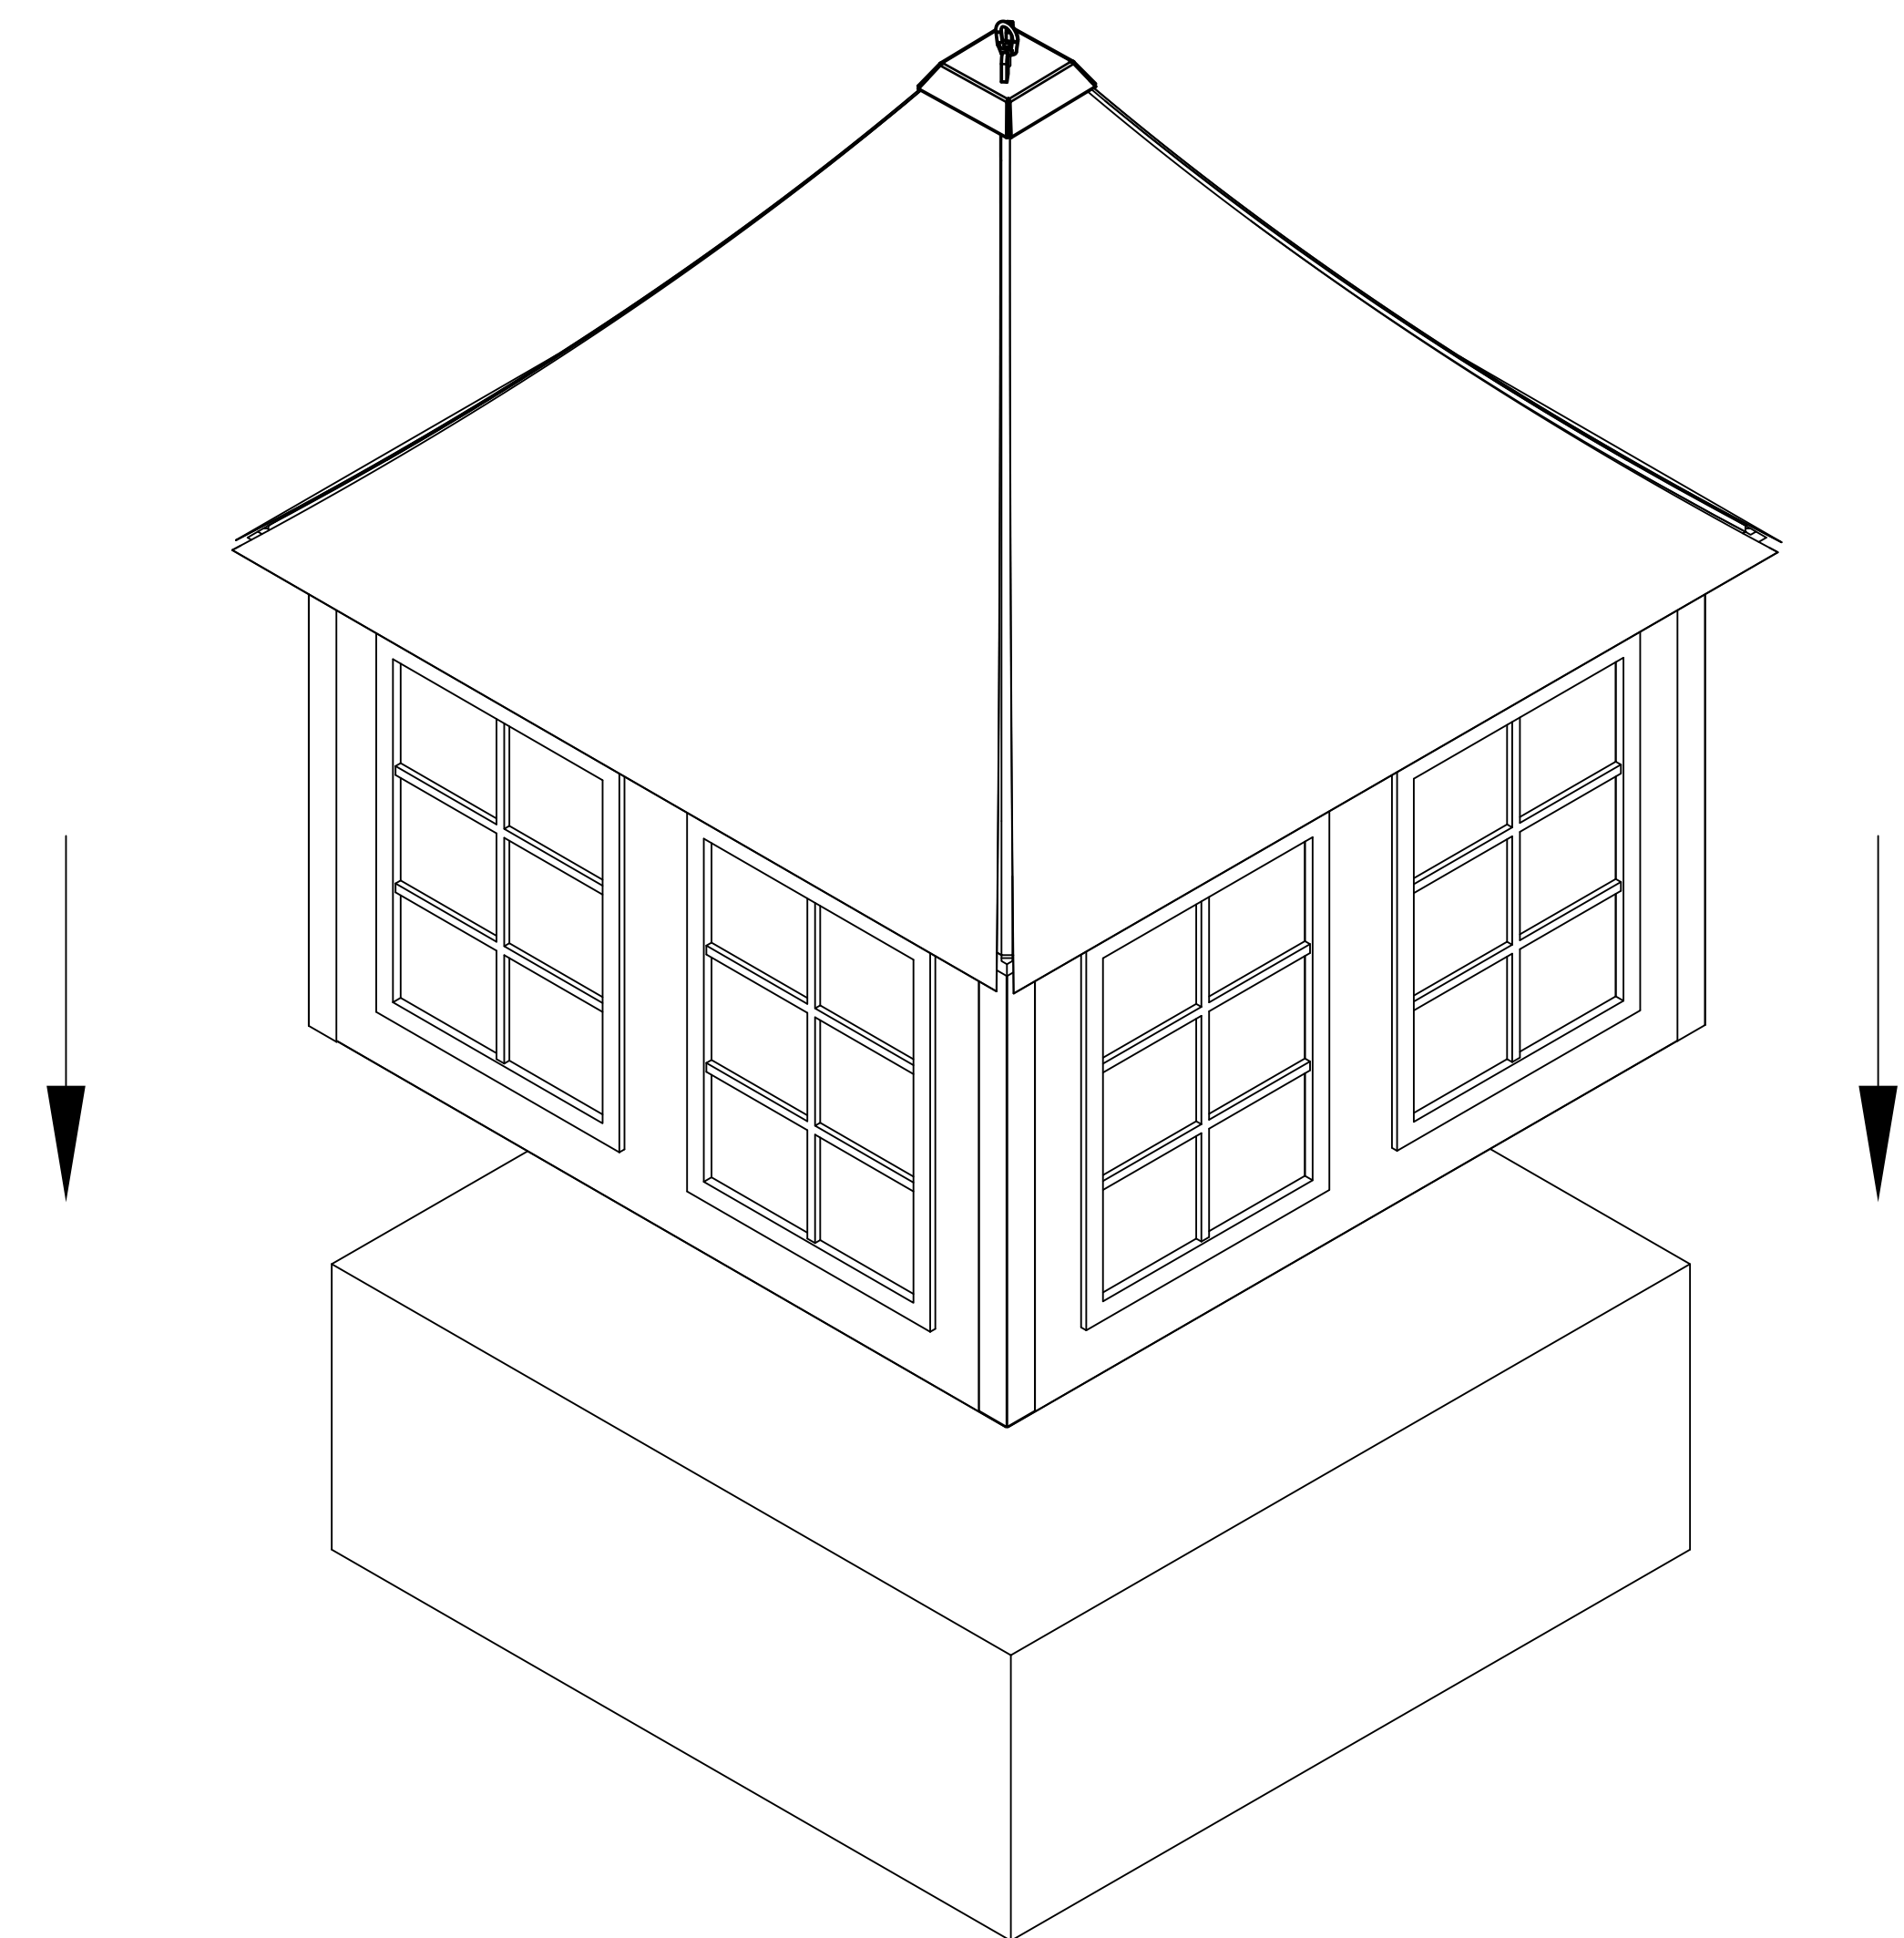


WINDOW

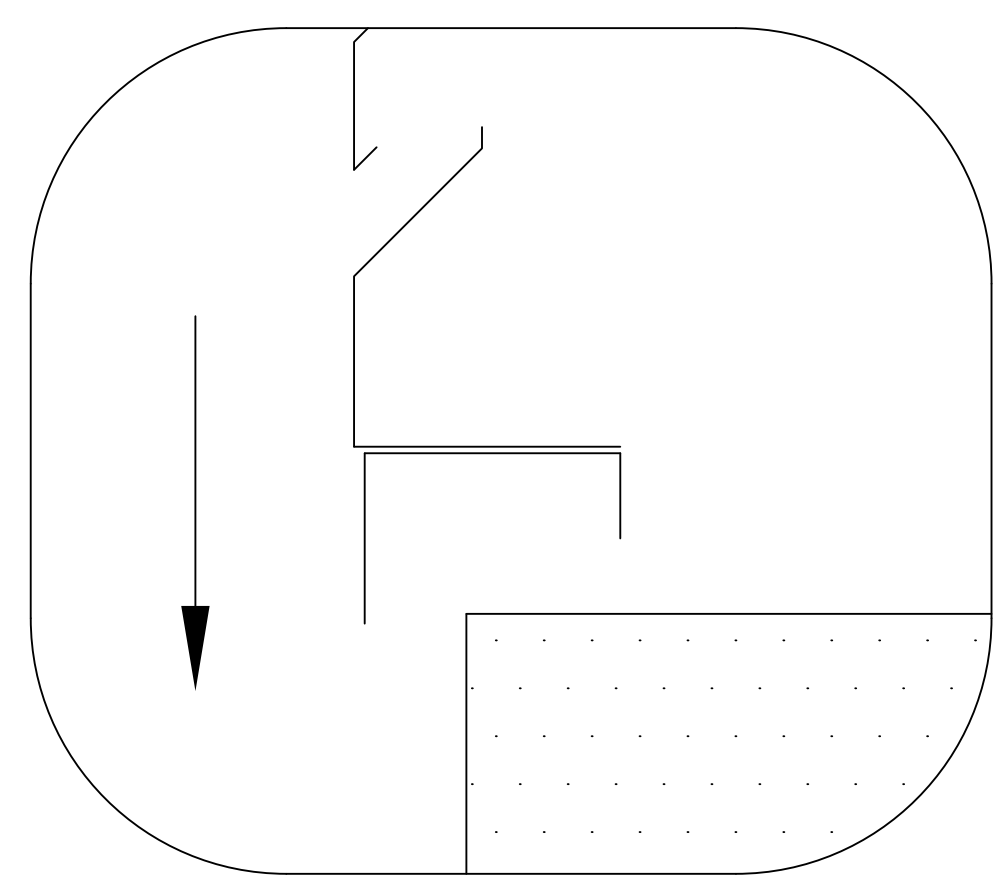

LOUVER

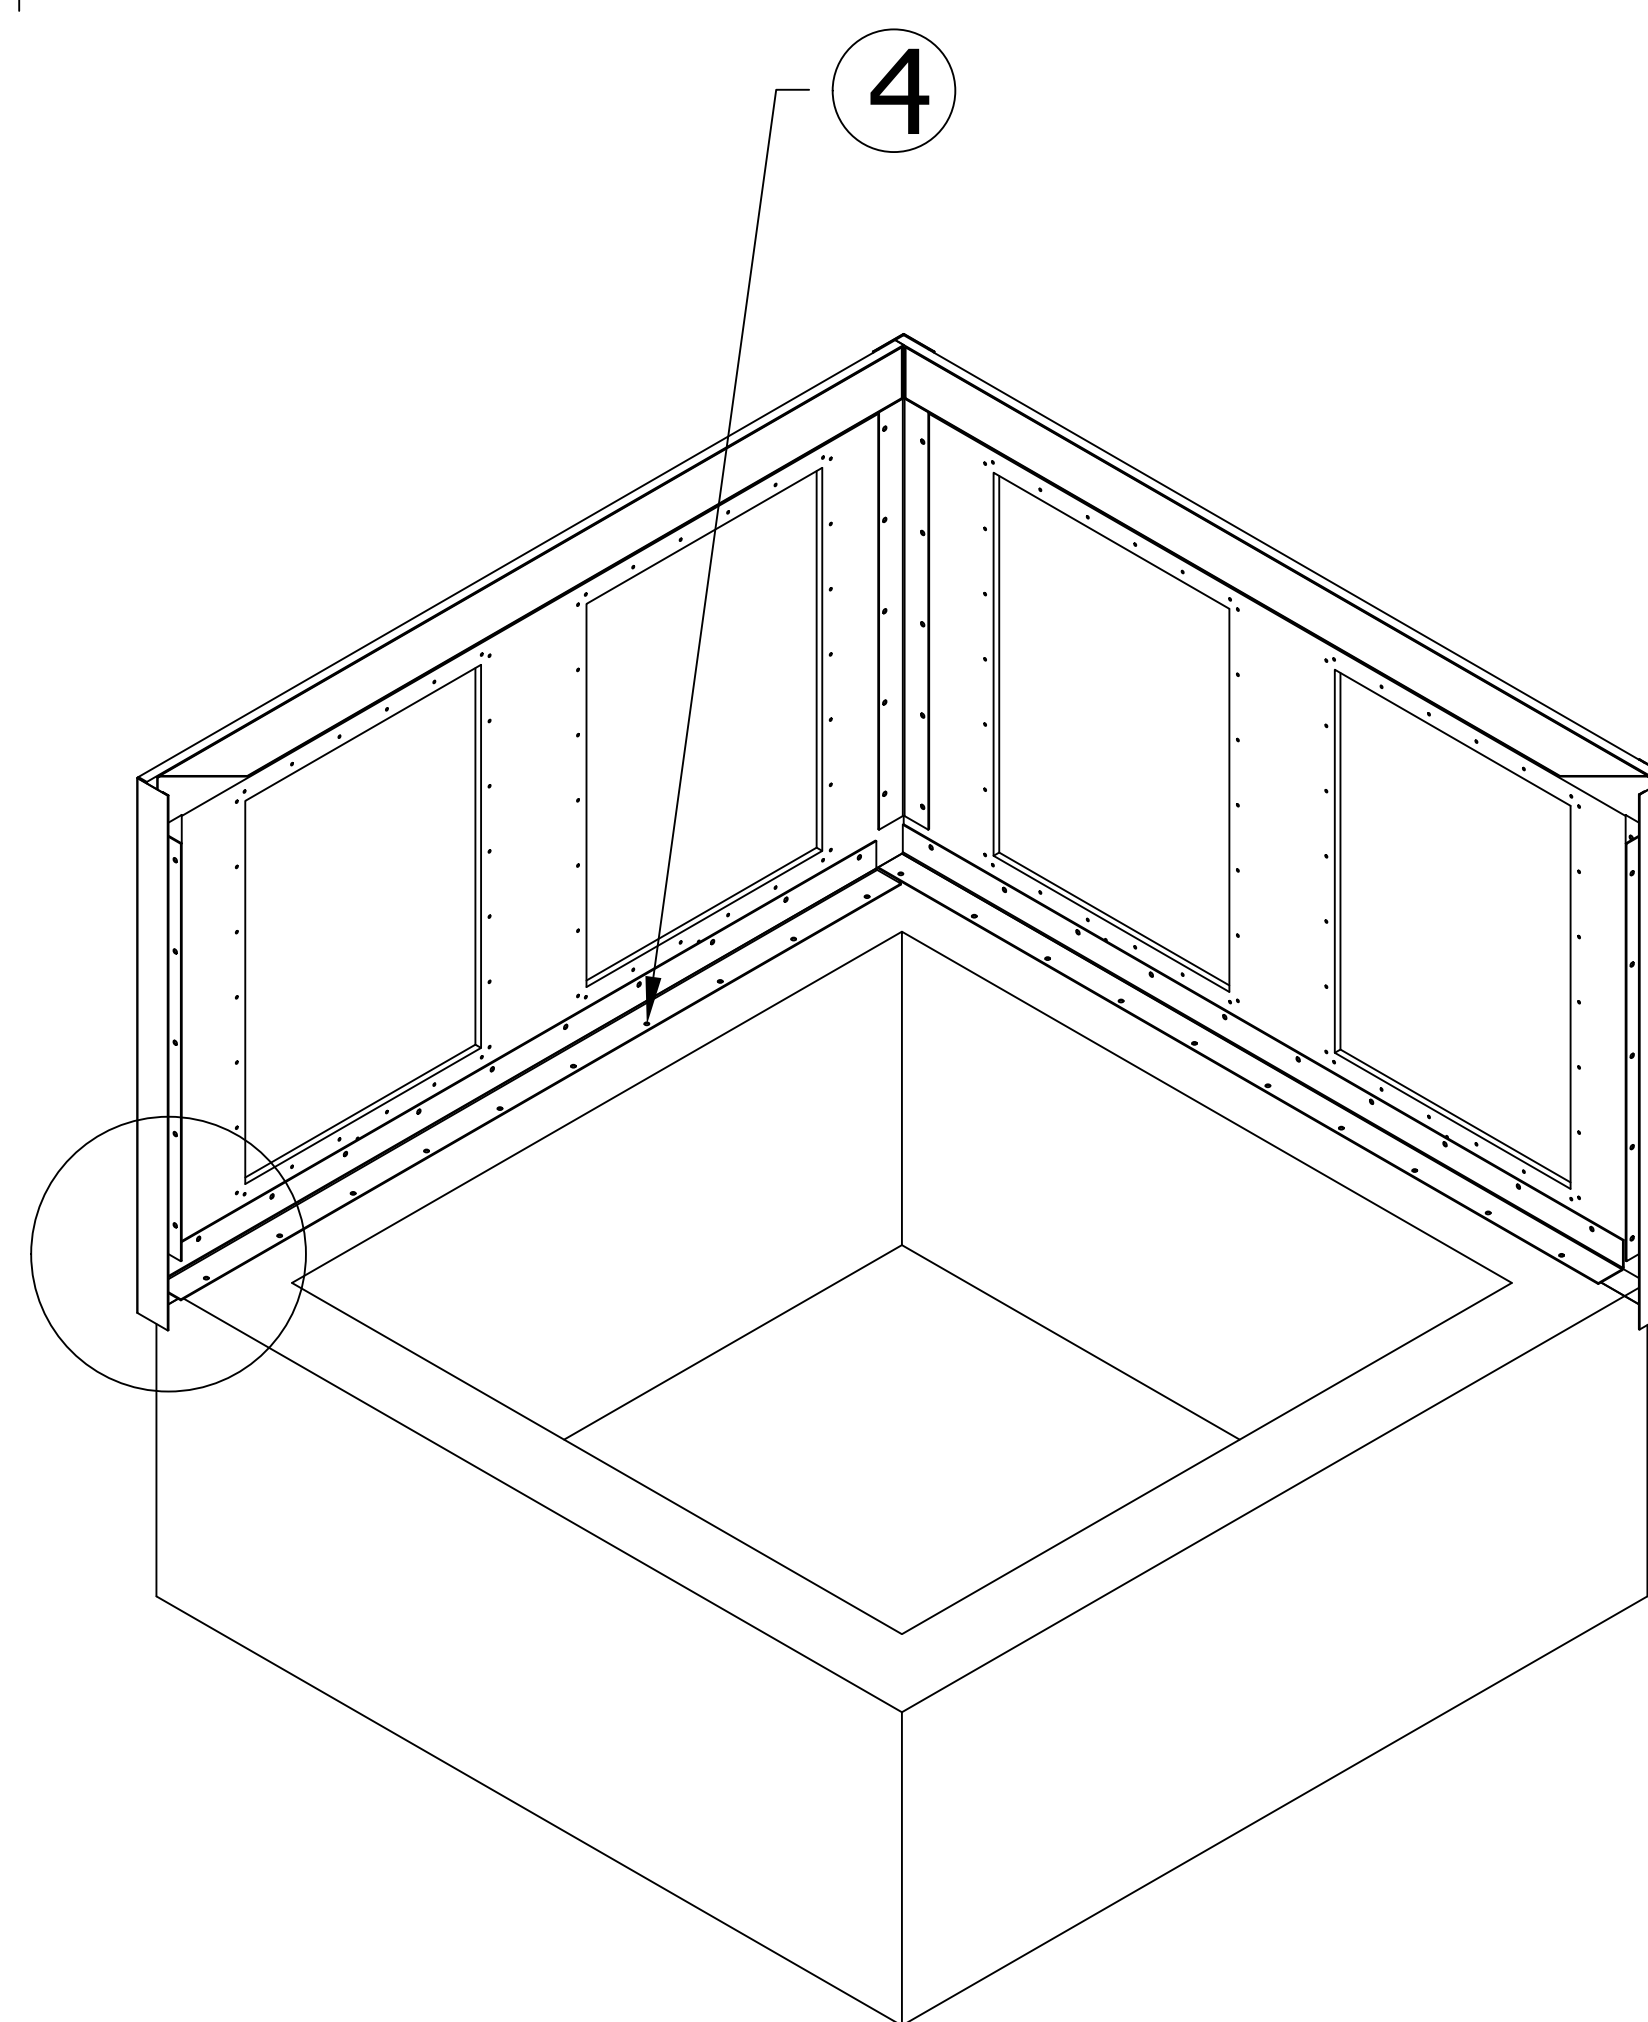

10" APART, 5PL

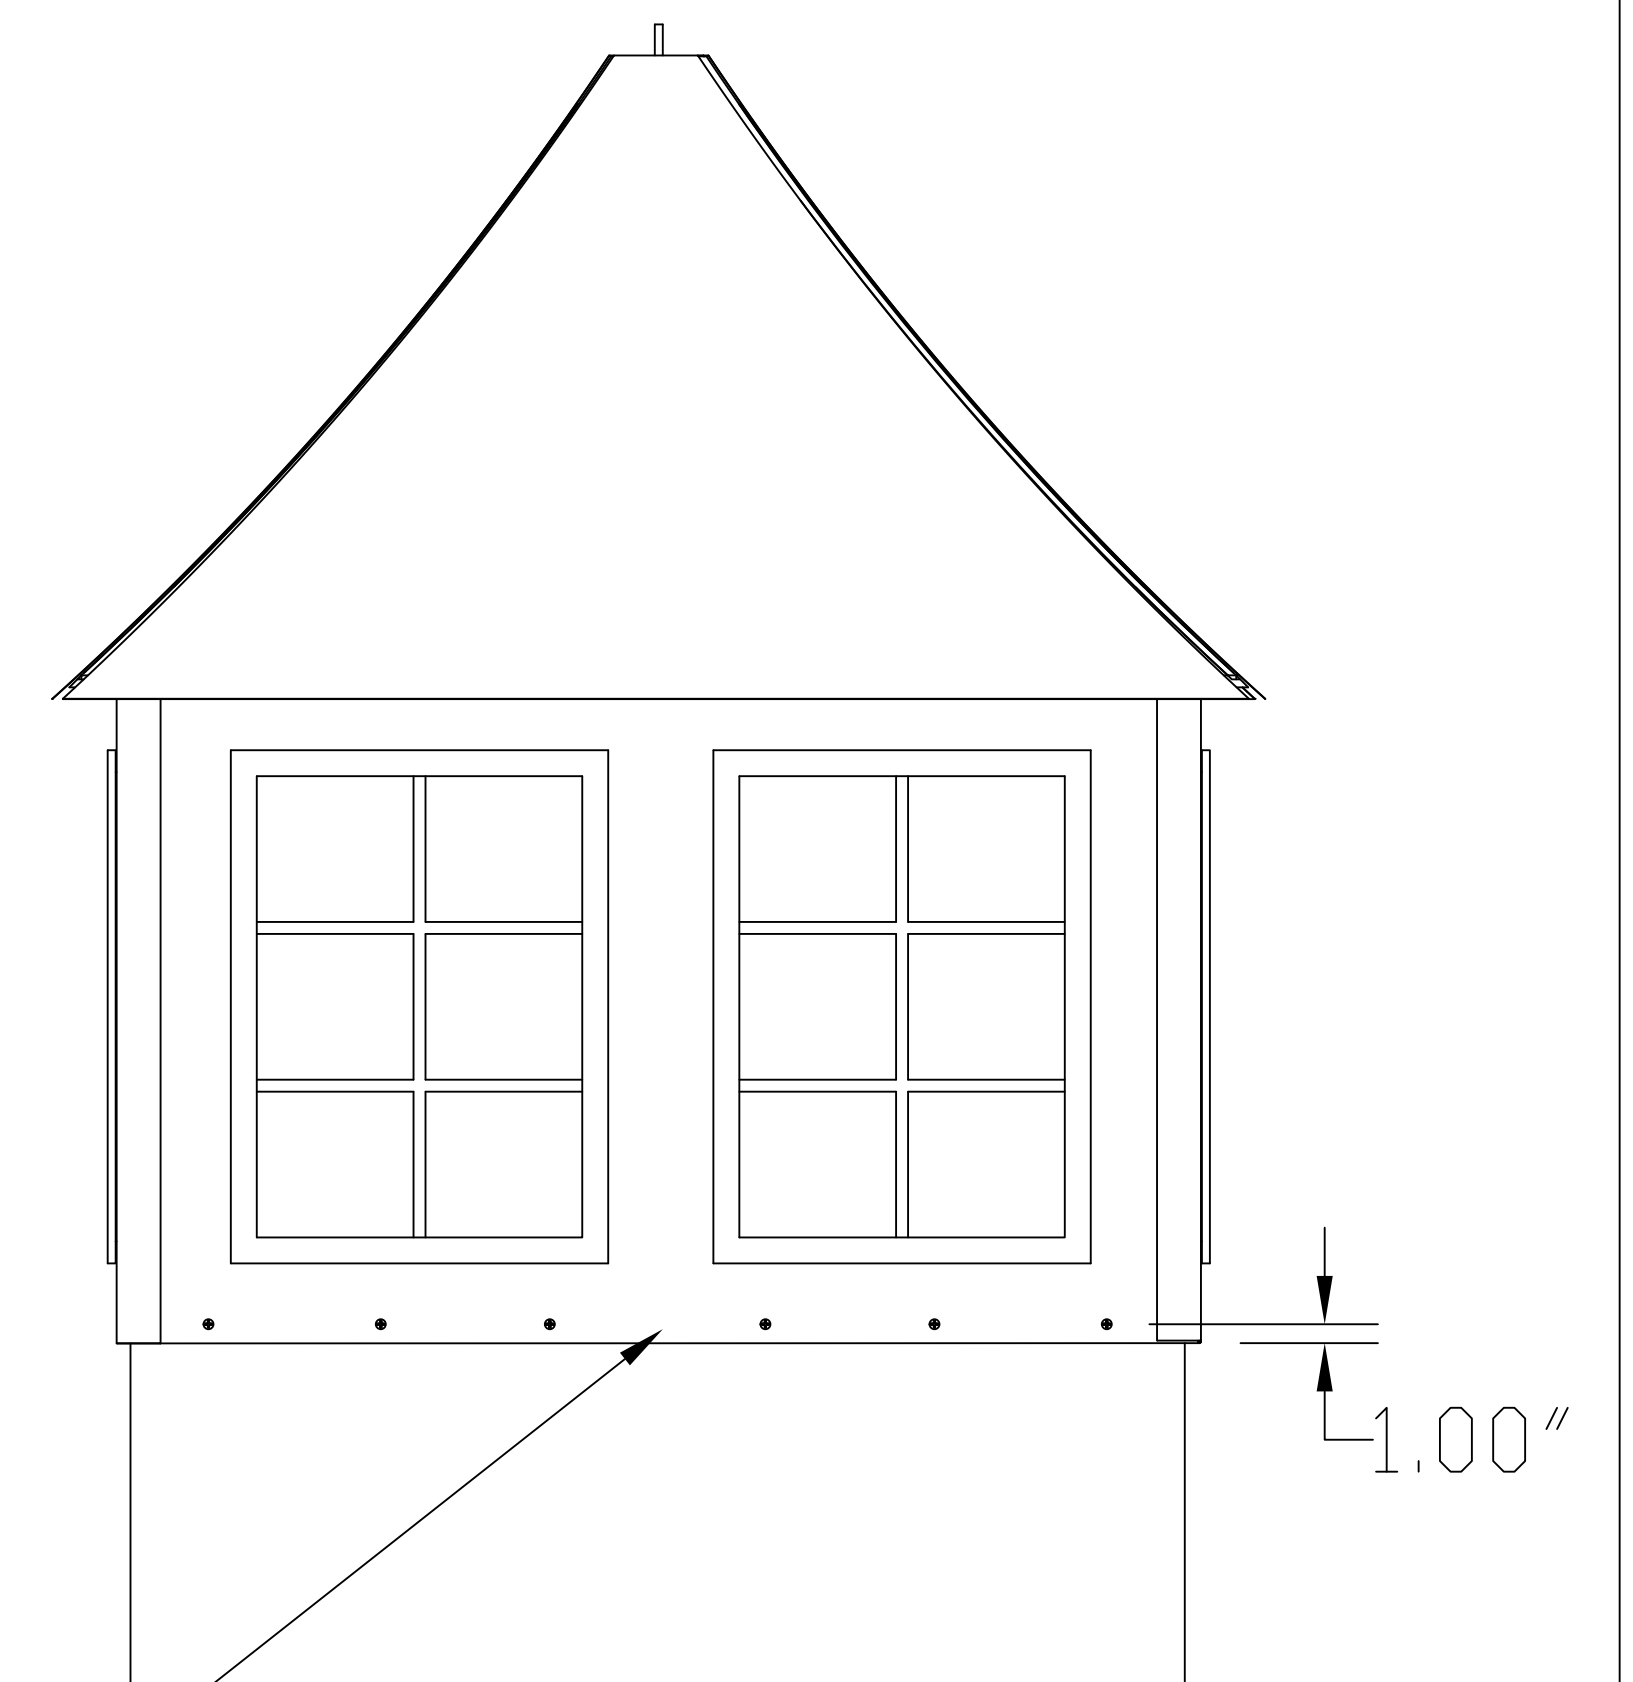

- ⑤ IF CURB OR BASE IS SOLID, ATTACH CUPOLA TO BASE USING 6 SCREWS ON EACH SIDE OF CUPOLA, 1" UP FROM BOTTOM OF CUPOLA. PRE-DRILL HOLE POSITIONS AROUND PERIMETER OF CUPOLA USING 1/4" DRILL BIT. ONLY DRILL THROUGH SHEET METAL SIDE AND PLYWOOD INSERT. (DO NOT DRILL INTO CURB)
- ⑥ IF WEATHER VANE IS TO BE MOUNTED TO THE ROOF CAP, FOLLOW STEPS 1-5 THEN REMOVE JAM NUT AND HOIST RING FROM ROOF CAP. RE-INSTALL AND TIGHTEN JAM NUT THEN ASSEMBLE WEATHER VANE AS DIRECTED IN WEATHER VANE INSTRUCTIONS.

