



48" OCTAGON CUPOLA INSTALLATION INSTRUCTIONS



① UNCRATING:

LIFT CUPOLA, USING HOIST RING ON TOP OF ROOF CAP. REMOVE SCREWS HOLDING CUPOLA TO SKID USING T25 OR #2 SQR DRIVE AS REQUIRED FROM UNDERNEATH.

② INSTALLATION:


LIFT CUPOLA TO ROOF TOP USING HOIST RING. LOWER ONTO CURB OR UNIVERSAL BASE.

③ IF CURB/BASE IS OPEN TO AREA BELOW, ATTACH CUPOLA ON THE INSIDE THROUGH THE ANGLES USING THE SCREWS PROVIDED.

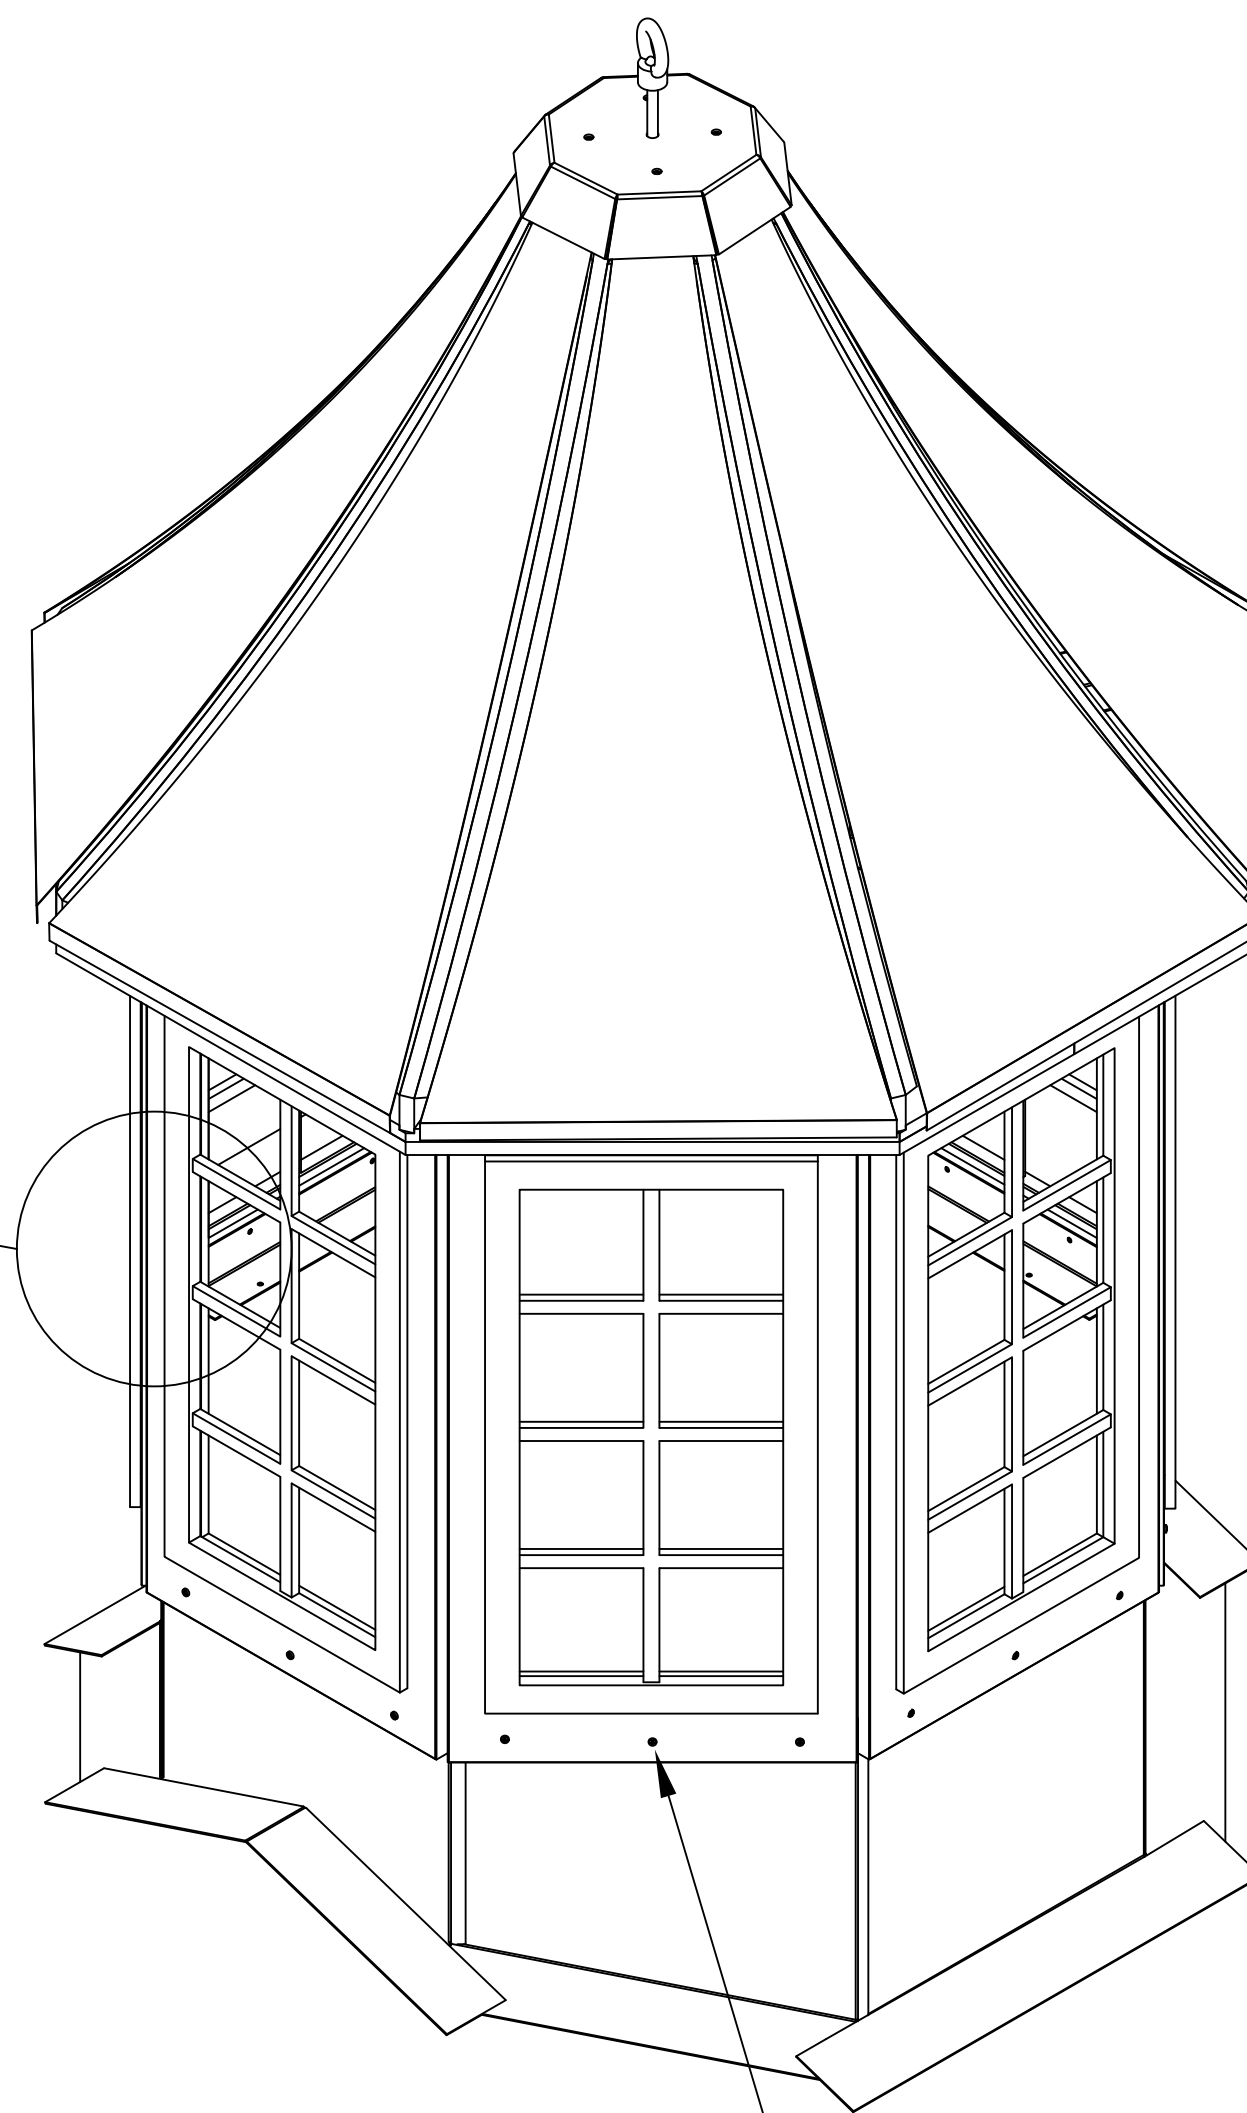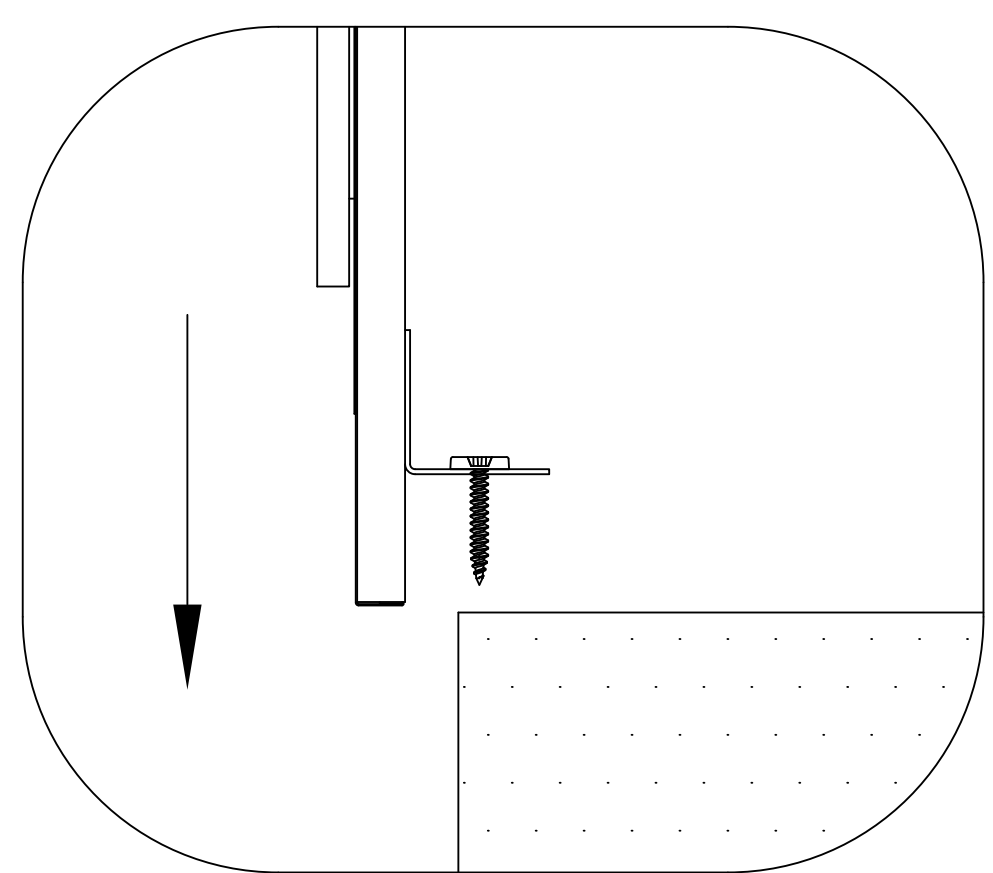

④ IF CURB/BASE IS NOT OPEN TO THE AREA BELOW, USE THE PROVIDED (3) SCREWS TO ATTACH EACH SIDE OF THE CUPOLA TO BE CURB/BASE. THE SCREWS SHOULD EACH BE PLACED 1" FROM THE BOTTOM, 1" FROM EACH SIDE AND ONE IN THE CENTER.

IF NOT OPEN TO AREA BELOW, FASTEN TO CURB, 24 PLACES

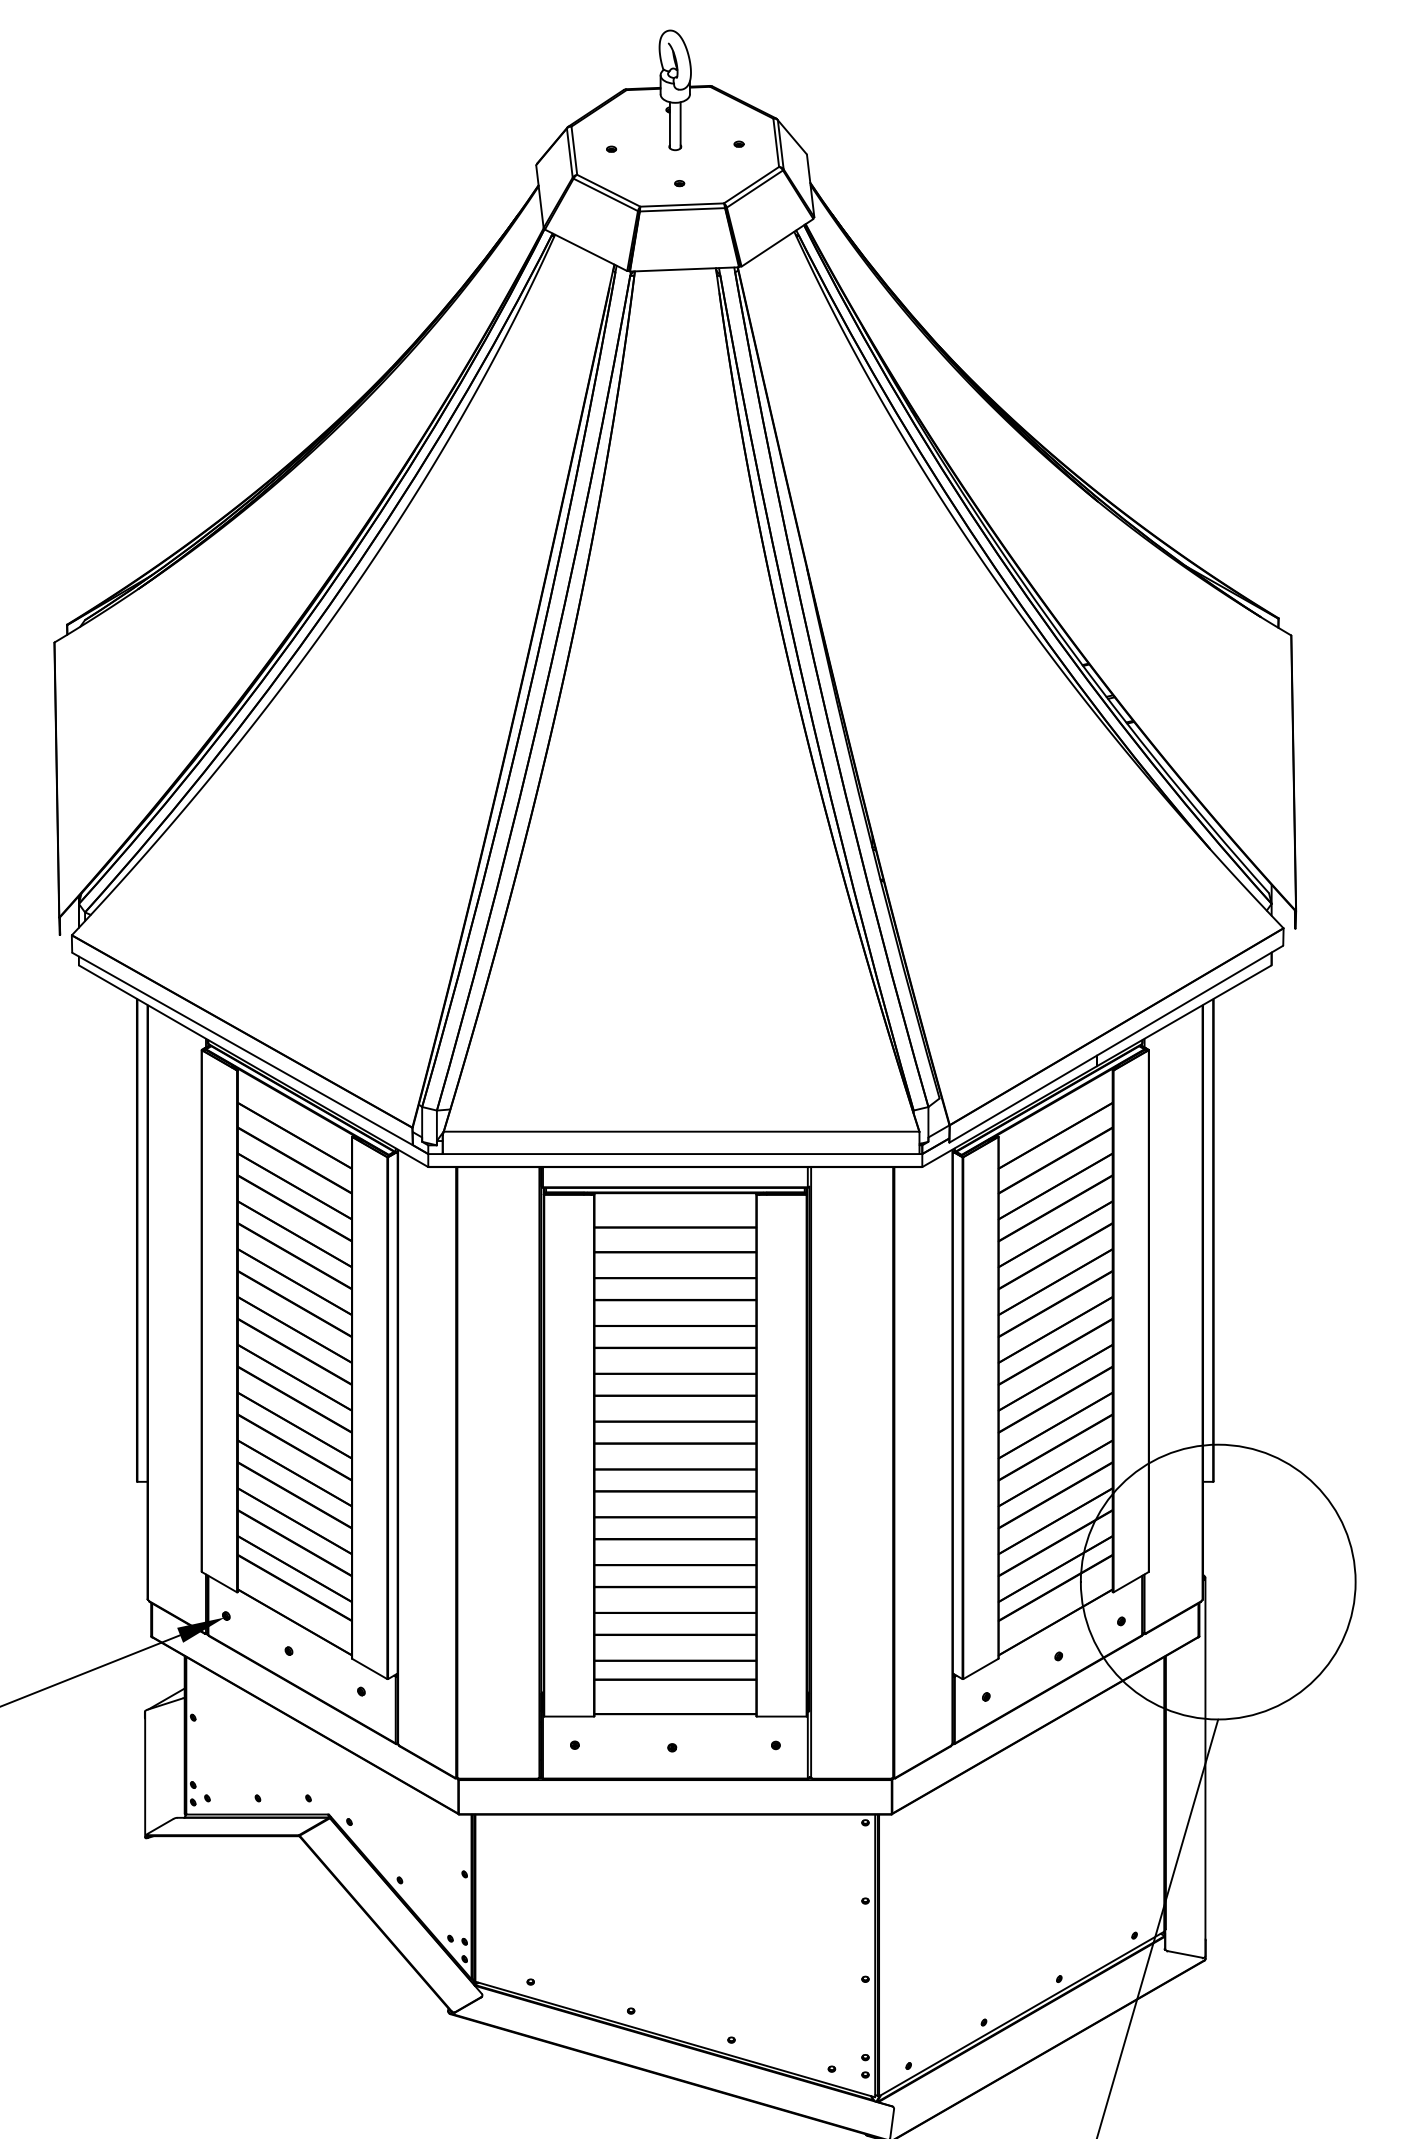

⑤ IF A WEATHER VANE IS TO BE MOUNTED TO THE ROOF CAP, FOLLOW STEPS 1-5 THEN REMOVE JAM NUT AND HOIST RING FROM ROOF CAP. RE-INSTALL AND TIGHTEN JAM NUT THEN ASSEMBLE WEATHER VANE AS DIRECTED IN WEATHER VANE INSTRUCTIONS.

